

RENEGADE

MULTI-BIAS FUZZ

FUZZ

Controls the output level of the fuzz.

9-18V

Standard 2.1mm x 5.5mm center-negative power input. Running Renegade at 18V will yield greater headroom.

IN/OUT

Standard 1/4" Instrument cable. Input on the right, Output on the left.



BIAS



In the up position, the circuit is biased to an open, more classic sounding fuzz.

In the down position, the circuit is biased to a more gated, modern sounding fuzz.



5mA @ 9V | 5mA @ 18V Consumption

IN/OUT: 1/4" Instrument Cable